
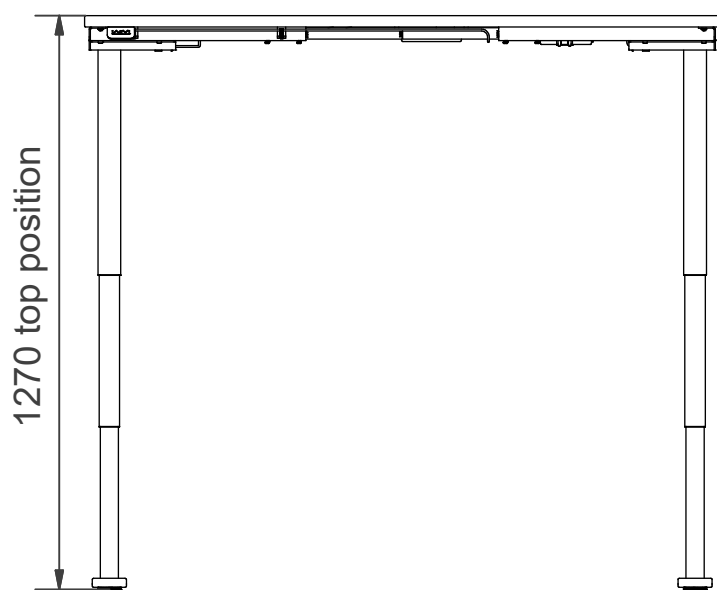
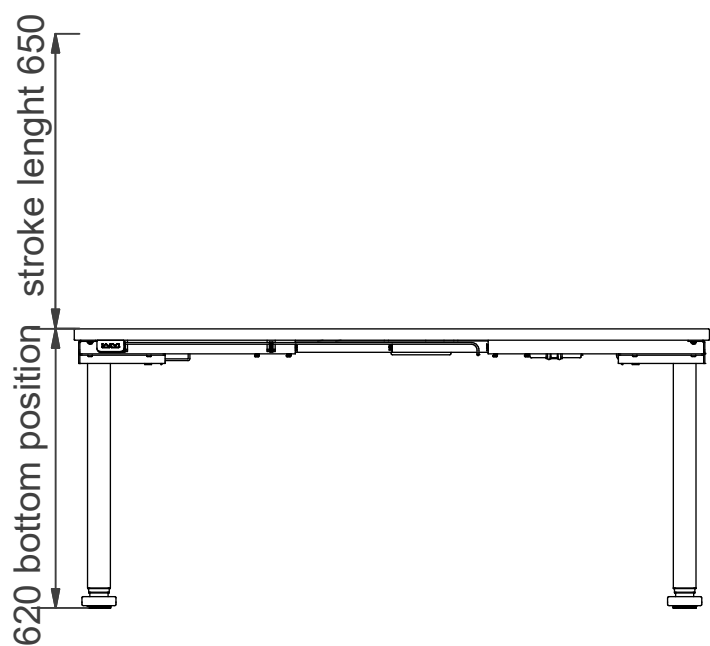
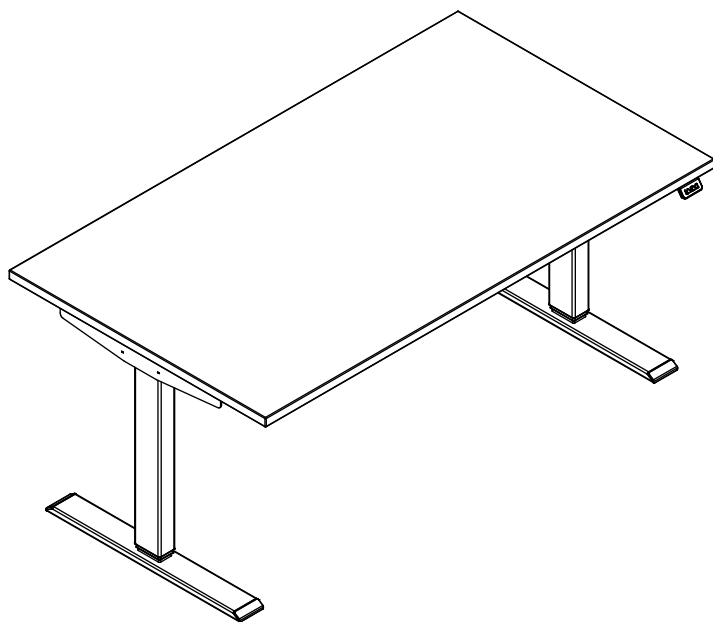


Assembly & use instructions

BeActive Medium electric table

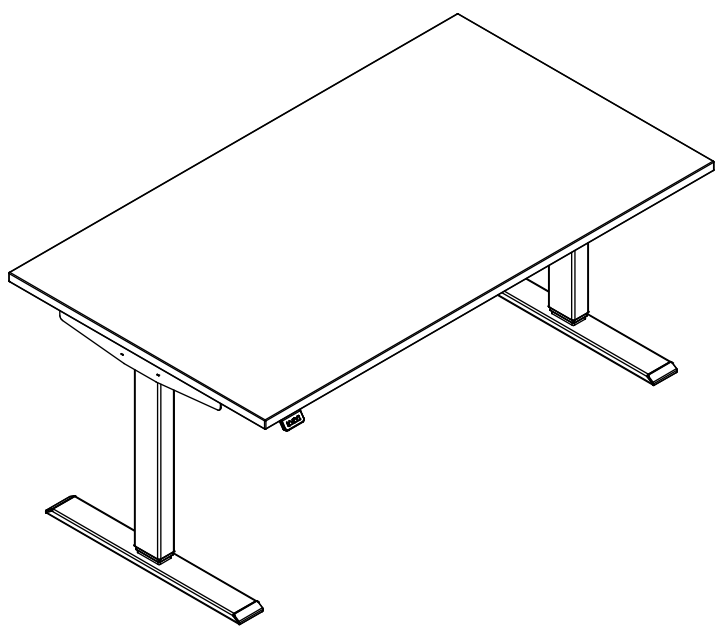

Parts and accessories:

Tools needed:

Allen wrench 4mm

Tape measure (not included in delivery)

Phillips head screwdriver
(not included in delivery)


The desktop is not included in delivery!

- | | |
|--------------------|--------|
| (1) Side Bracket | 2 pcs |
| (2) Upper Frame | 4 pcs |
| (3) Center Rail | 2 pcs |
| (4) Leg Part | 2 pcs |
| (5) Foot Part | 2 pcs |
| (6) Handset | 1 pc |
| (7) Control box | 1 pc |
| (8) Fastening band | 1 pc |
| (9) Converter | 1 pc |
| (10) Power Cord | 1 pc |
| (11) Cable Clip | 10 pcs |


16xmachine screw KM6x35

8xmachine screw KM6x30

A

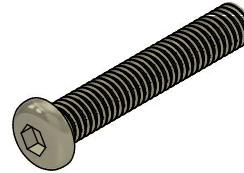

B

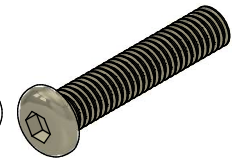


2xwood screw K5x16


D







12xwood screw K5x20

C

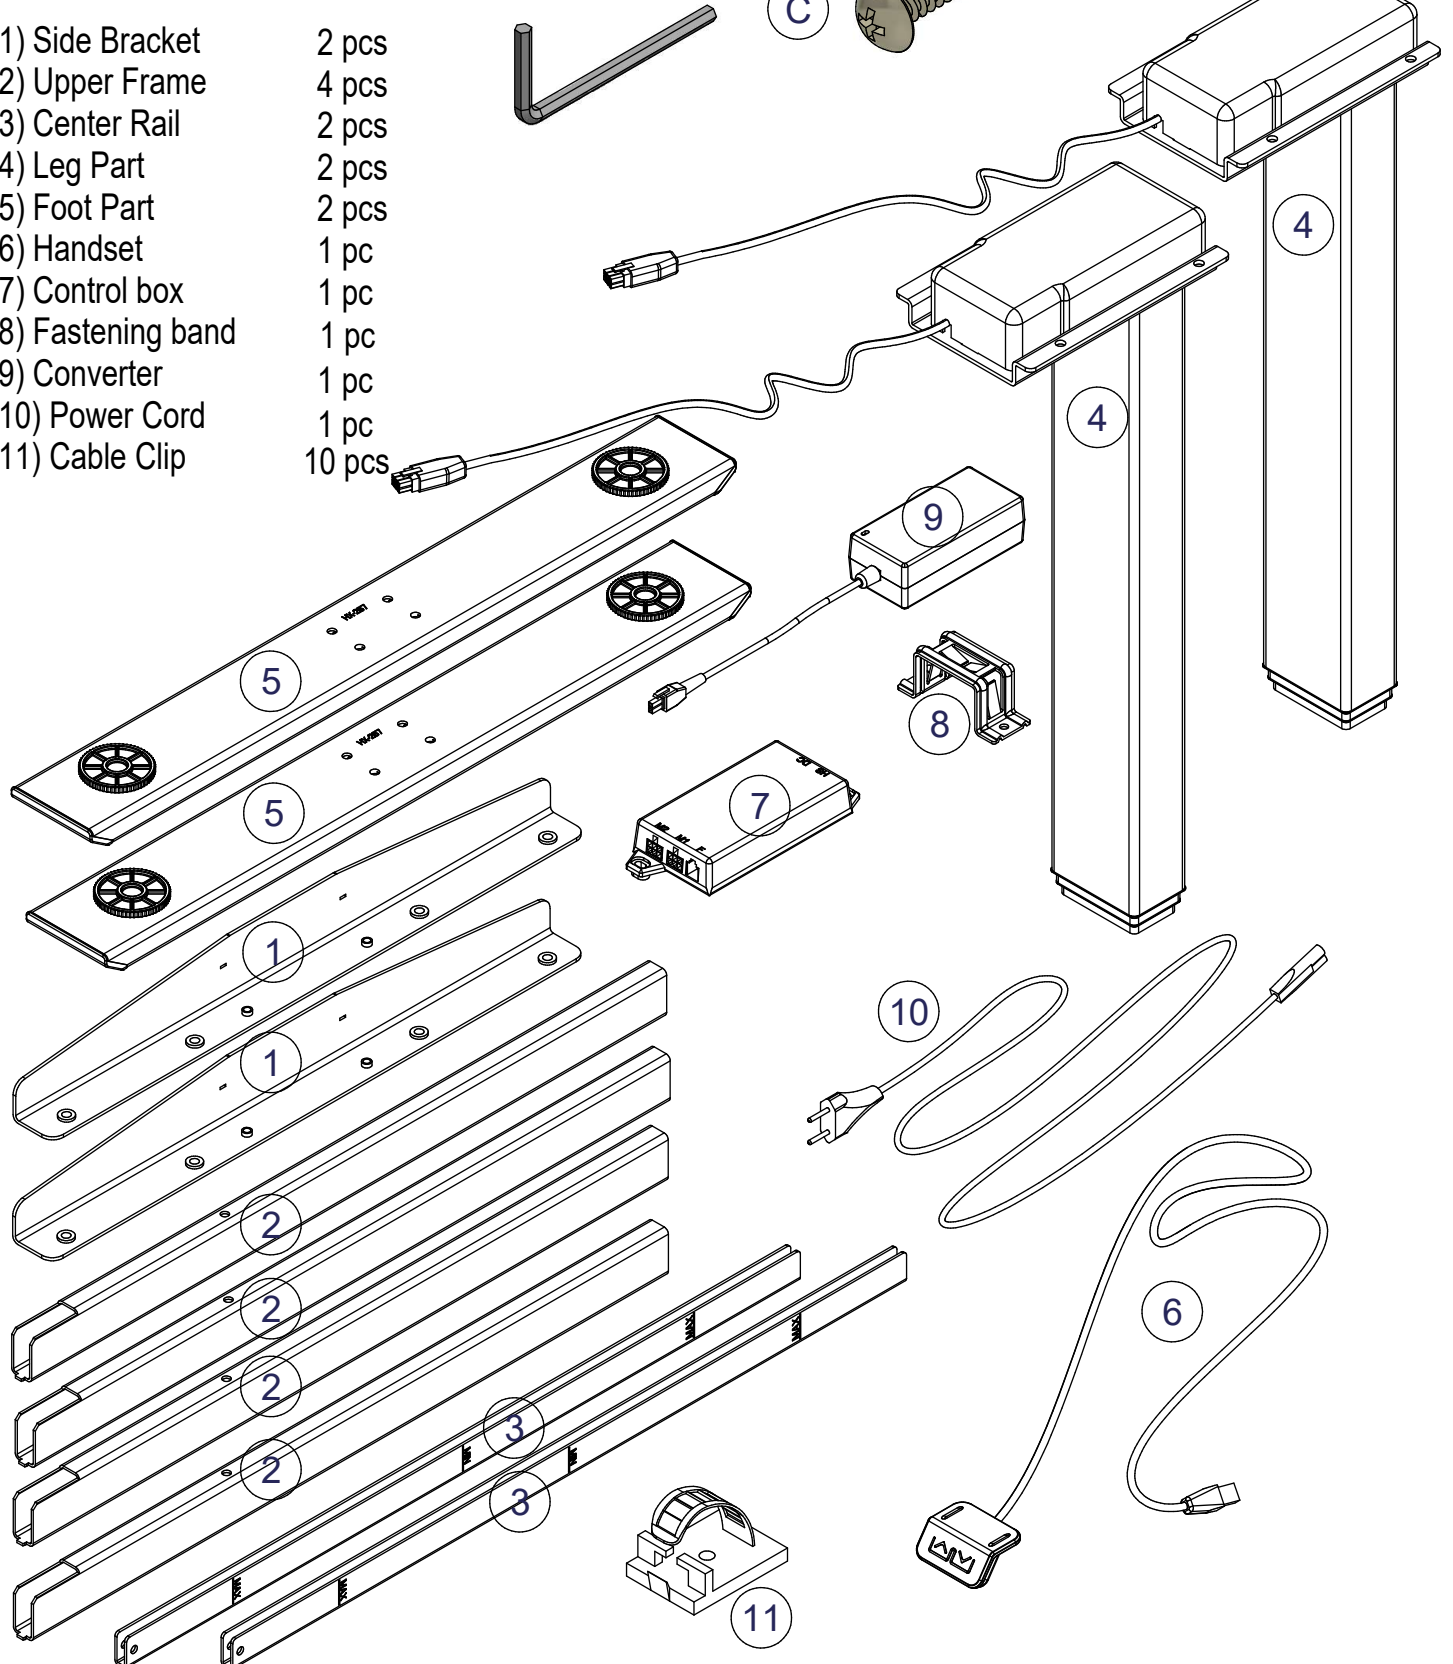

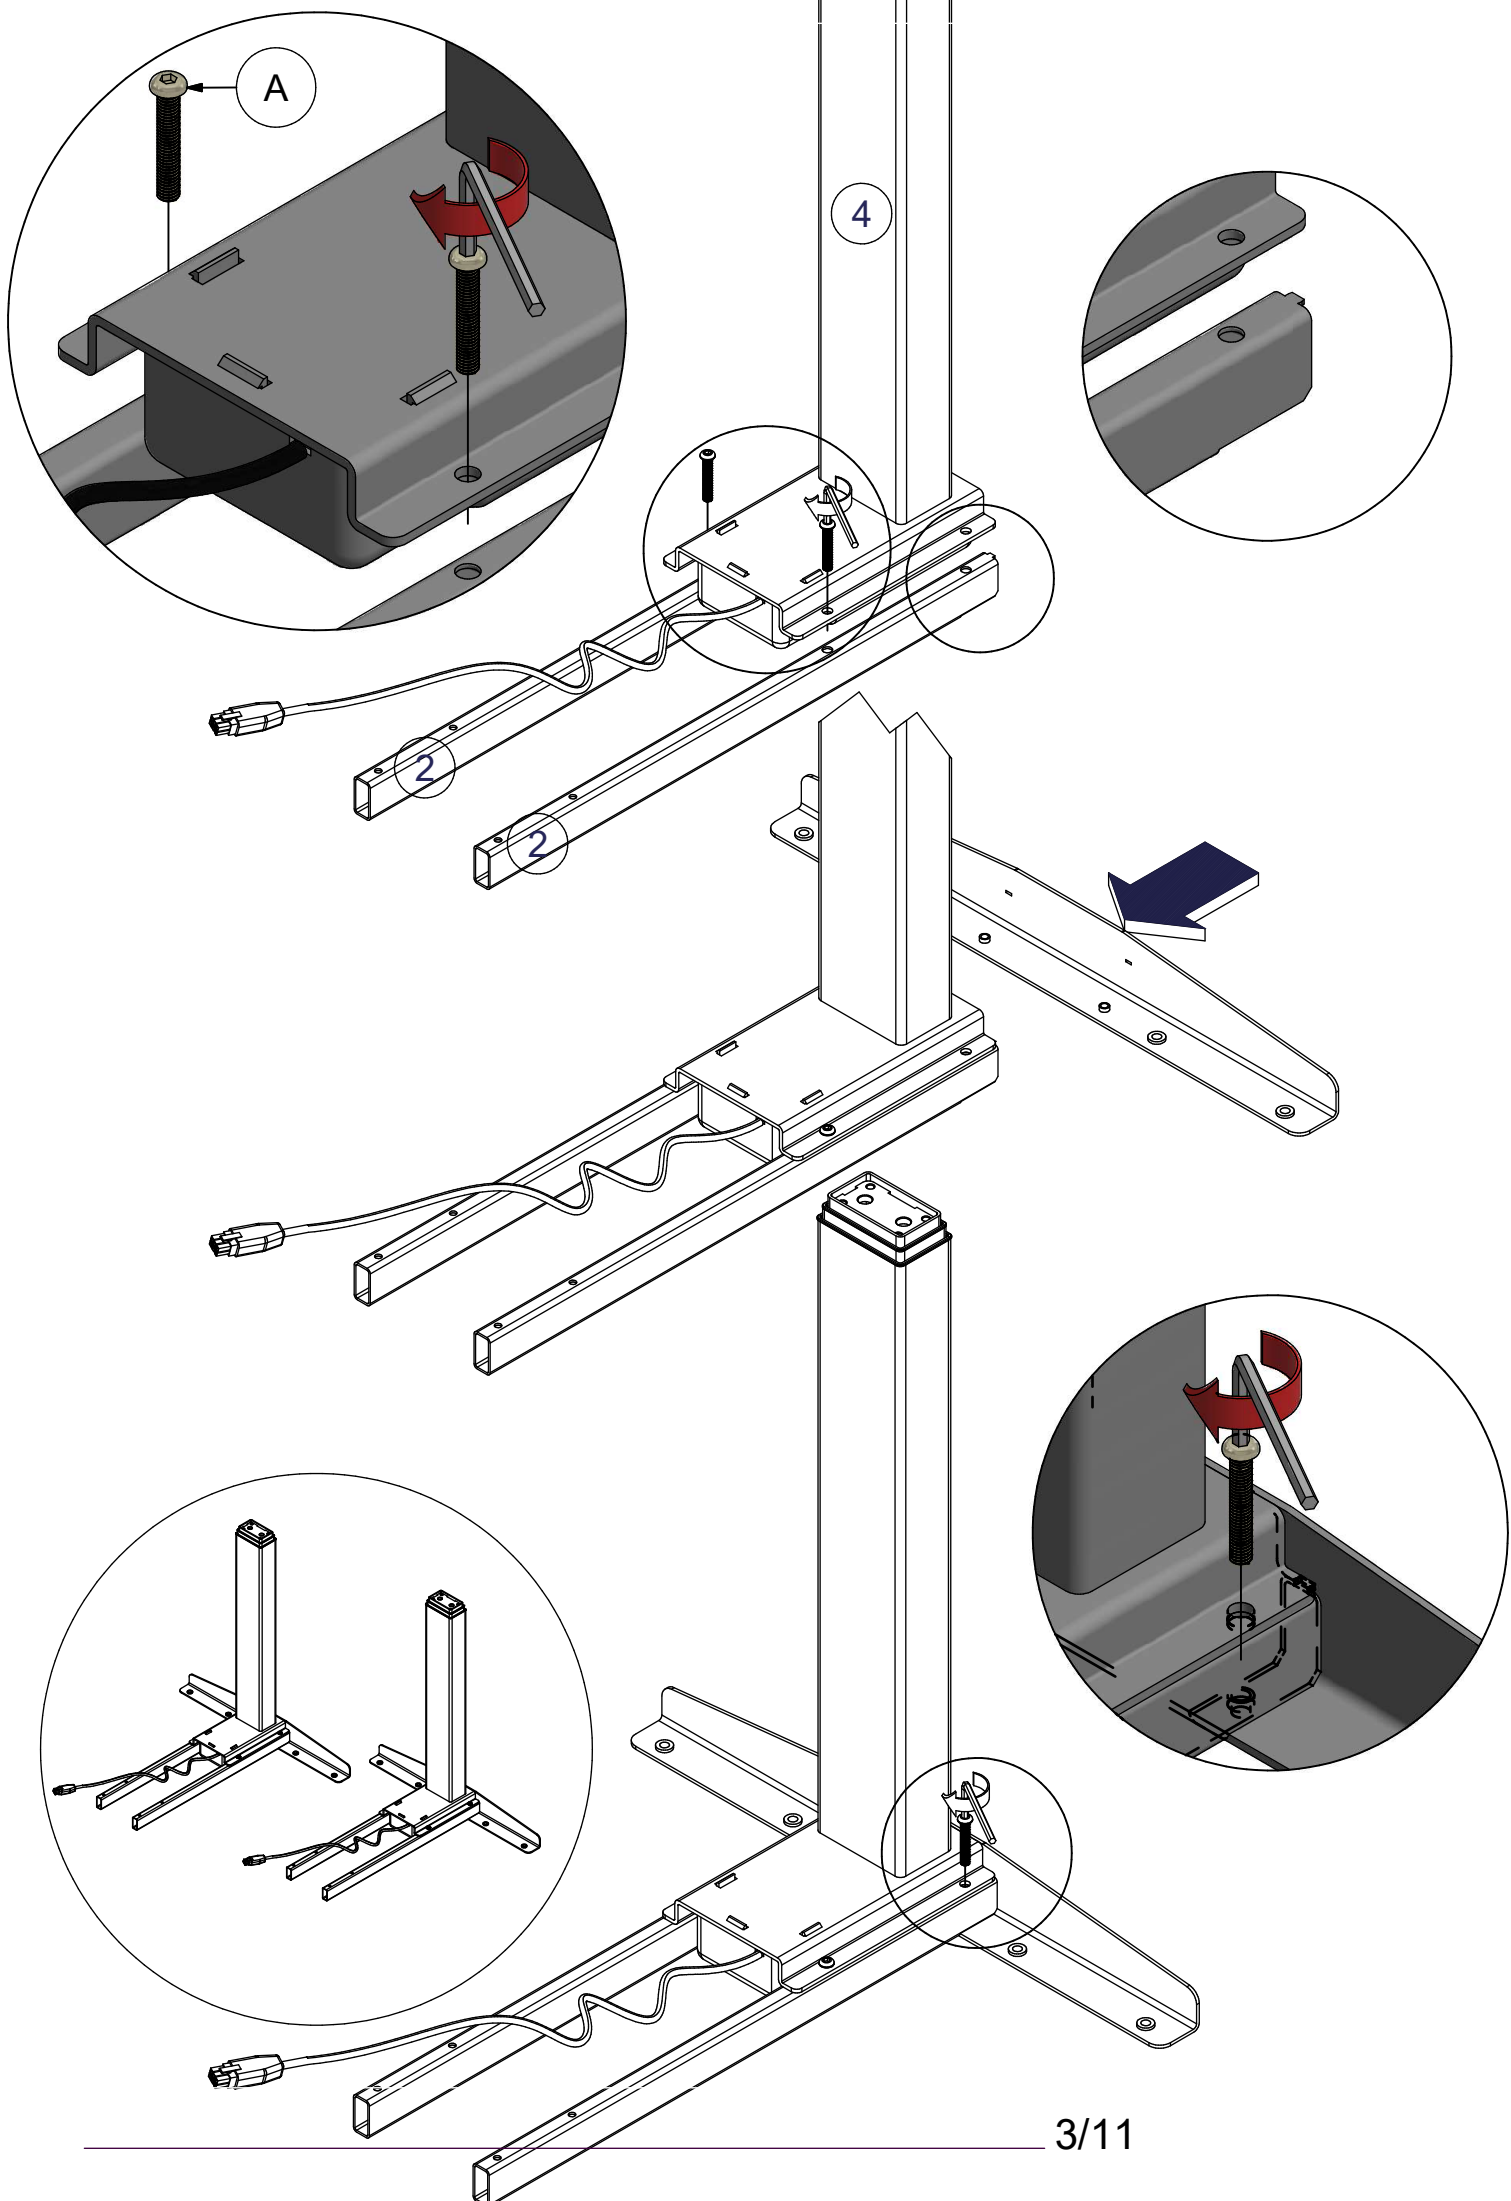



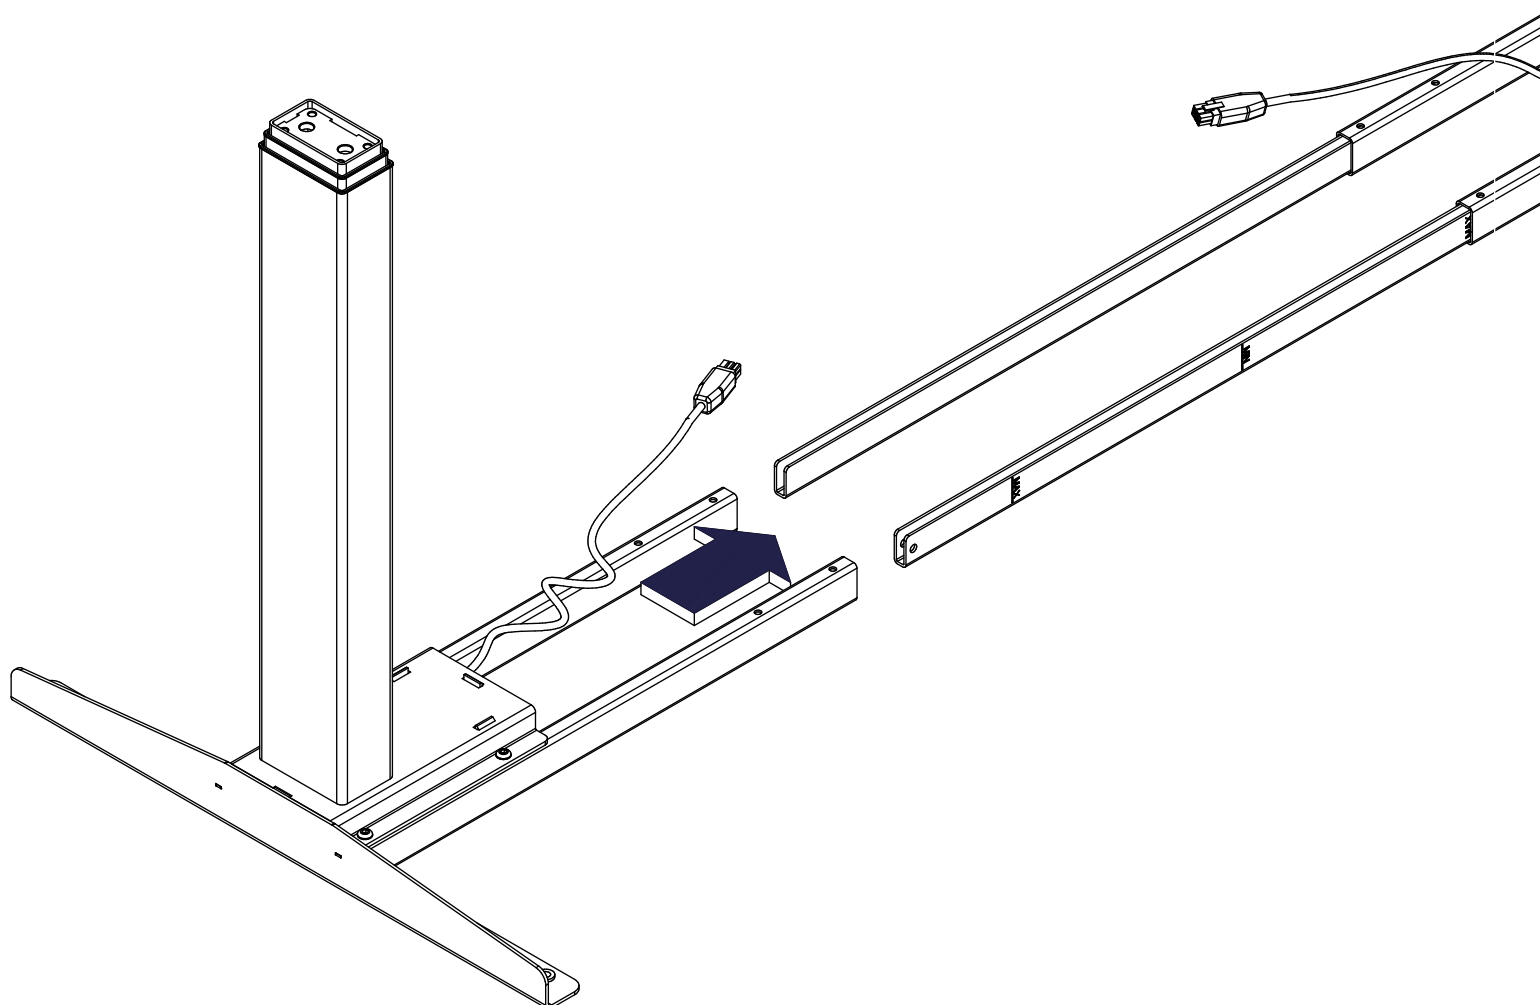
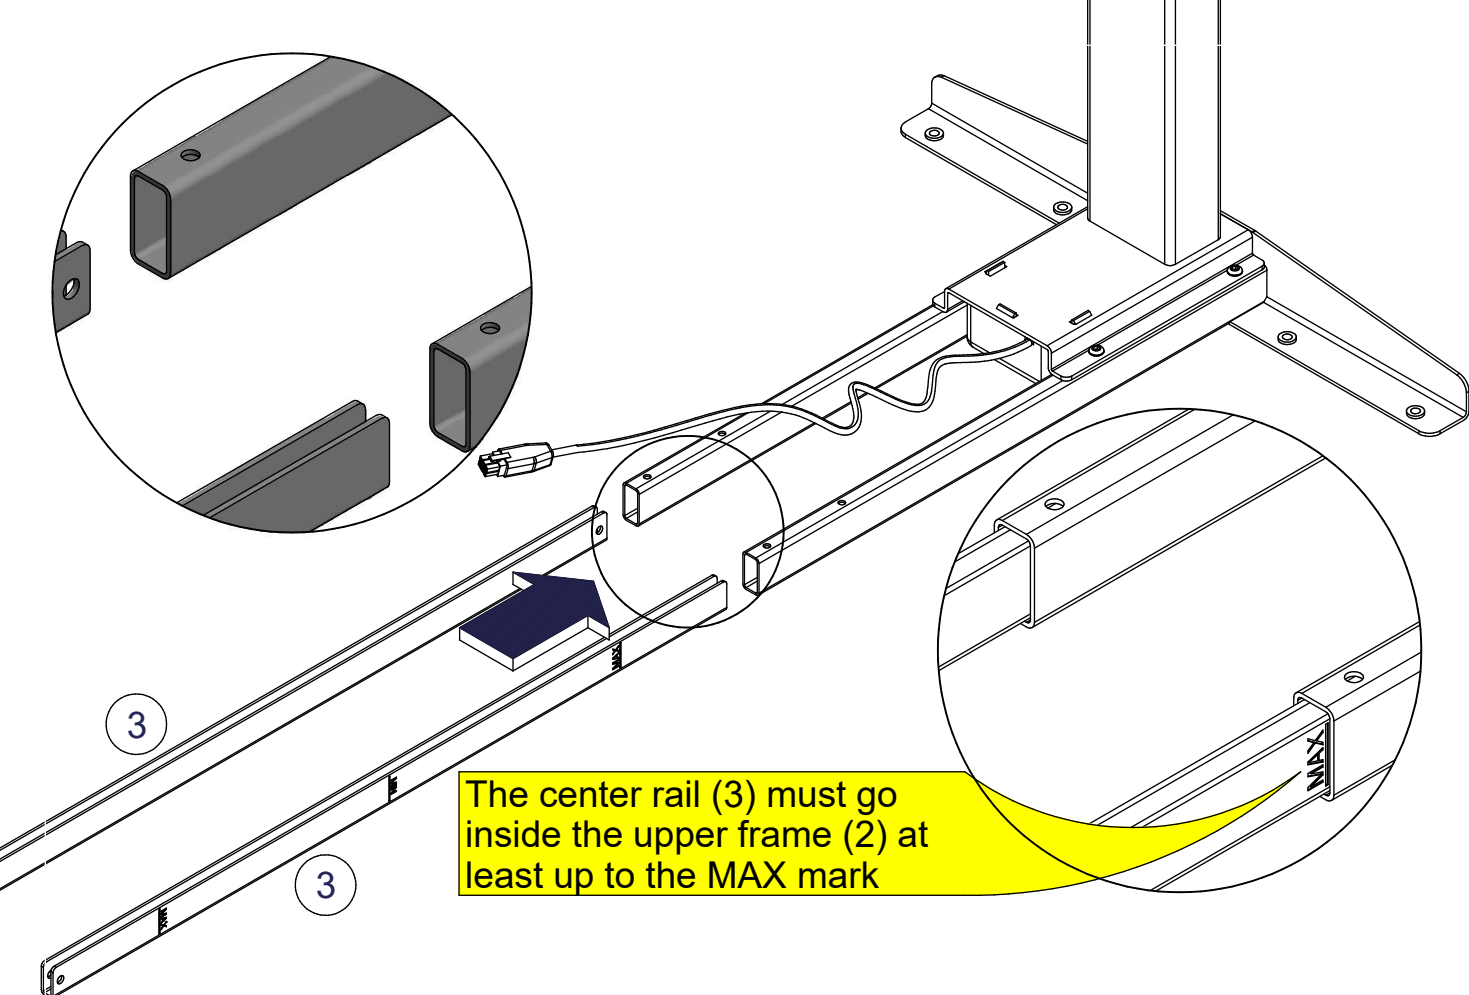


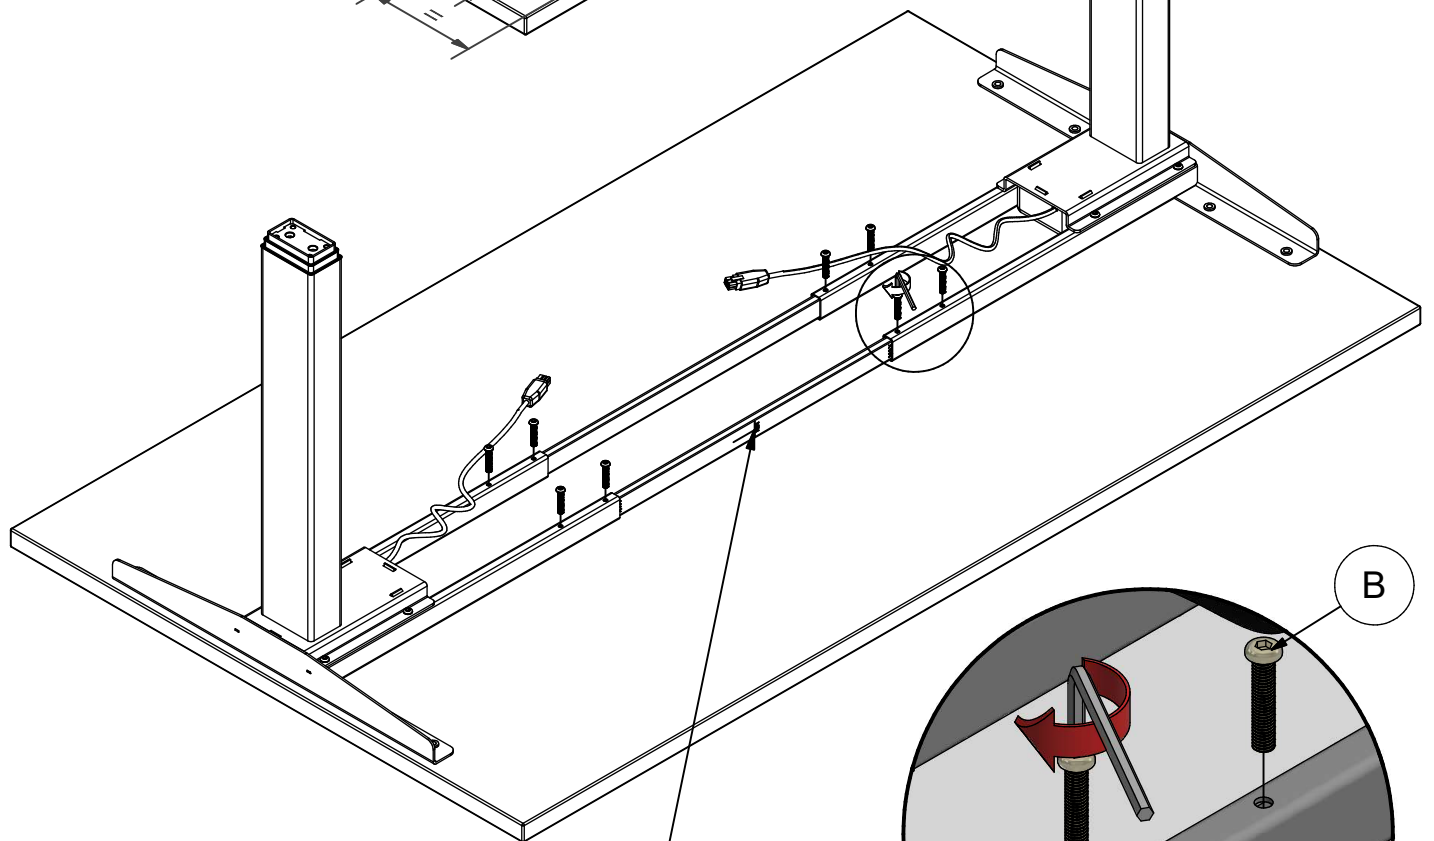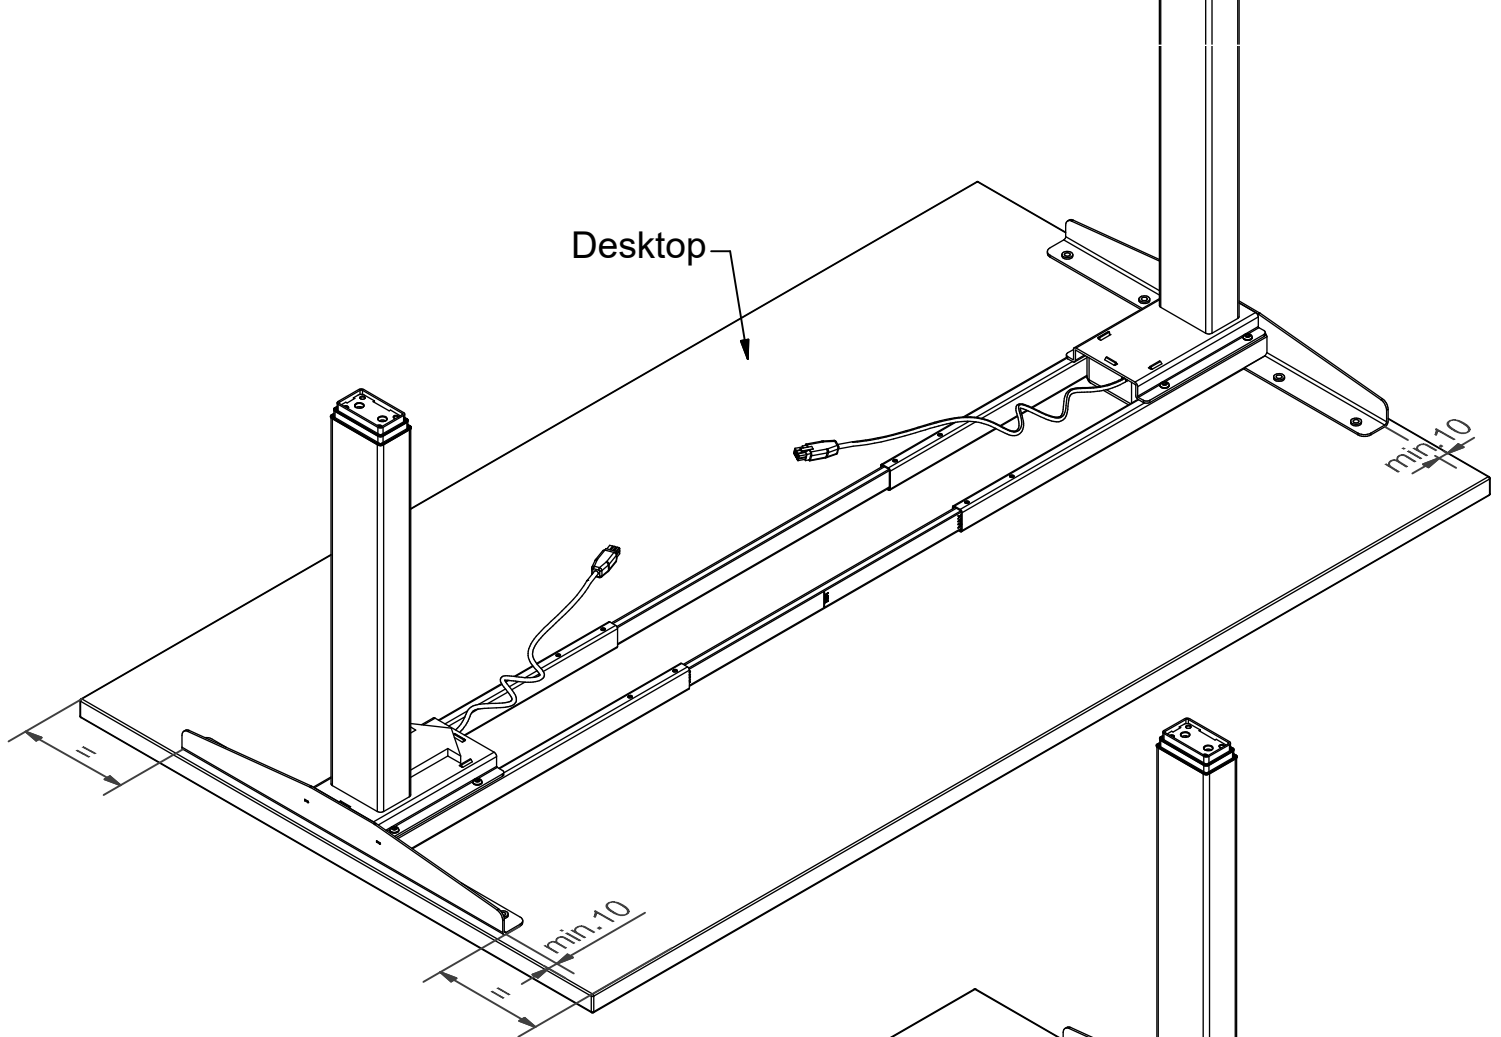

Adjust the rails symmetrically before inserting screws

Adjust the width of the desk base to fit the desktop by sliding the two halves outward. Notice "MAX" marking.

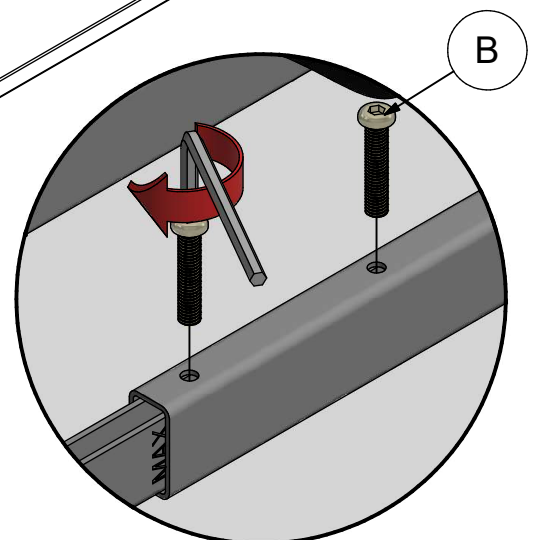

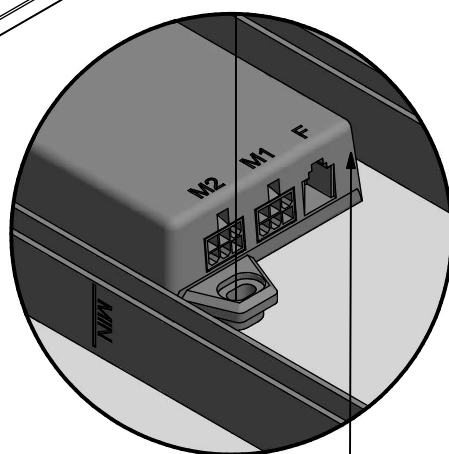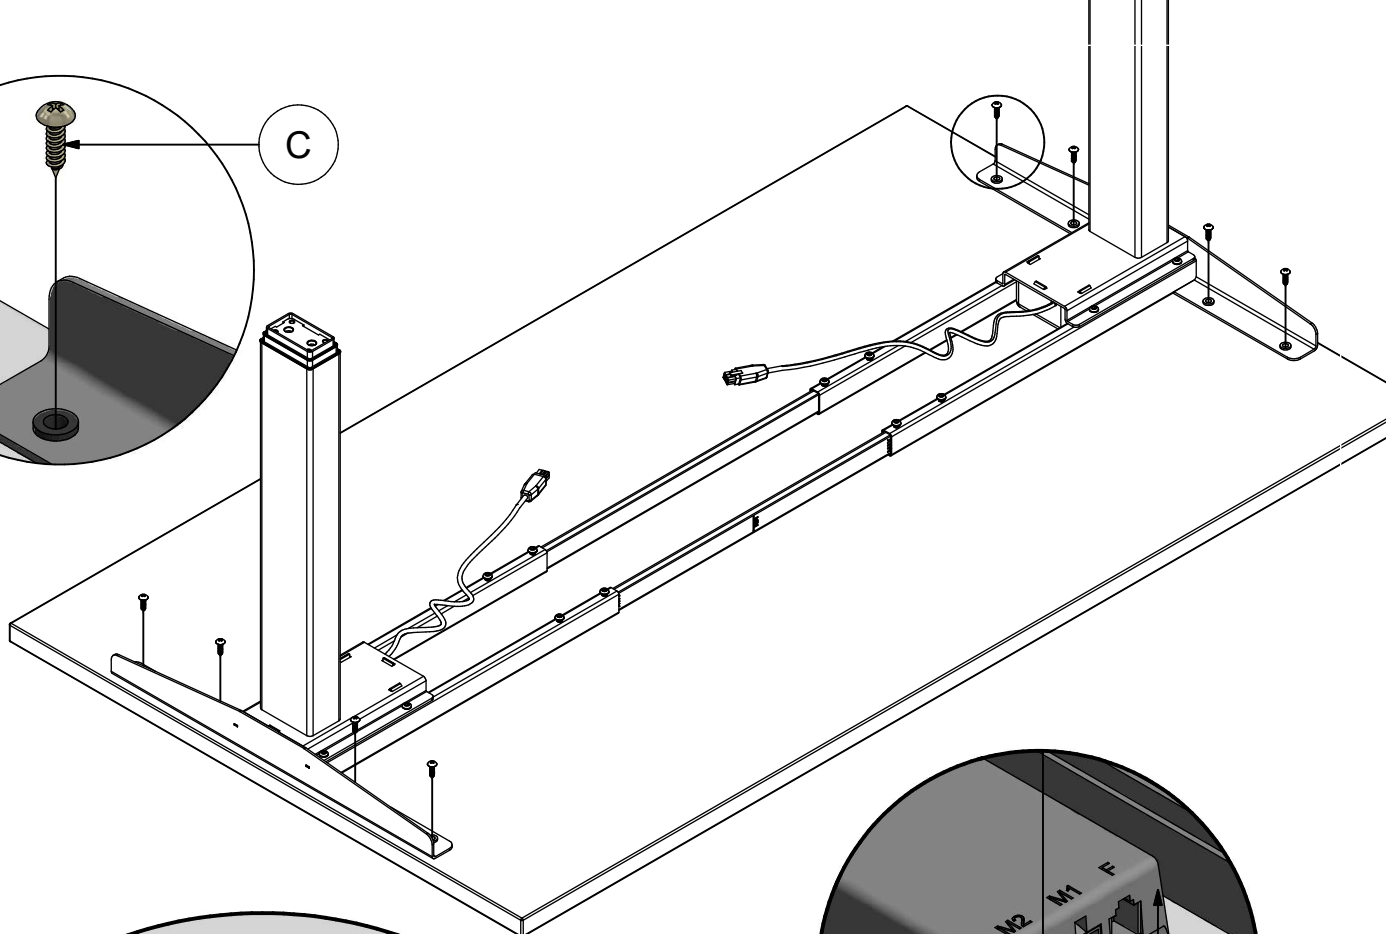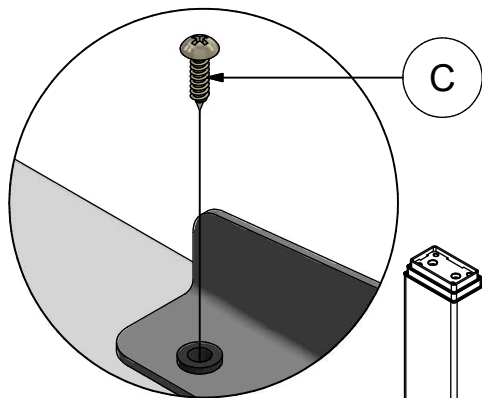

Place the control box's side in the center of the table

