


Assembly instructions

BeActive OneLeg Basic Electric Table

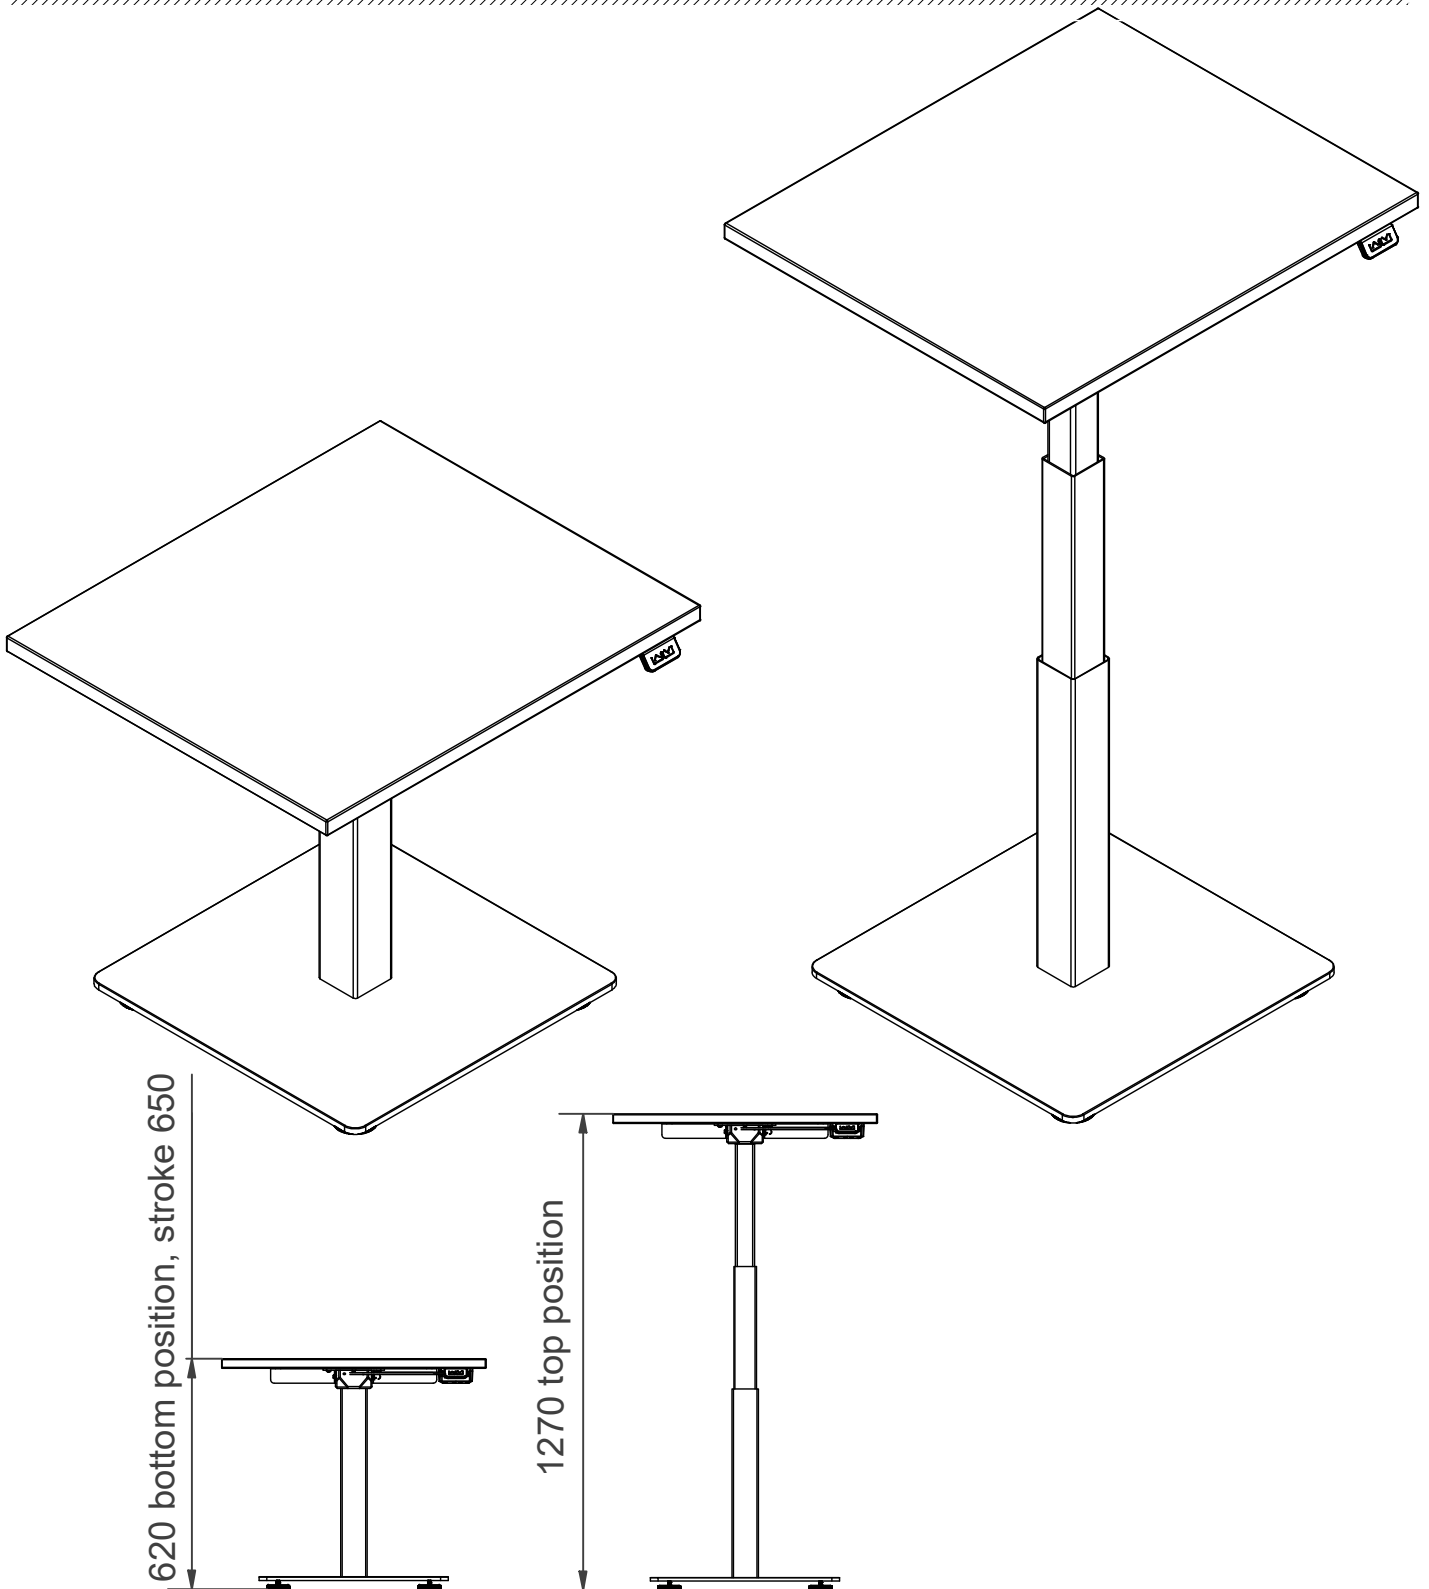

Parts and accessories:

Tools needed:









Allen wrench 4mm


Tape measure (not included in delivery)

Phillips head screwdriver (not included in delivery)


The desktop is not included in delivery!


- | | |
|-----------------------|------|
| (1) Leg part | 1 pc |
| (2) Control box | 1 pc |
| (3) Handset | 1 pc |
| (4) Power Cord | 1 pc |
| (5) Foot Part | 1 pc |
| (6) Upper Frame | 1 pc |
| (7) Cable Clip | 1 pc |
| (8) Glide | 4 pc |
| (9) Resonance blocker | 5 pc |

 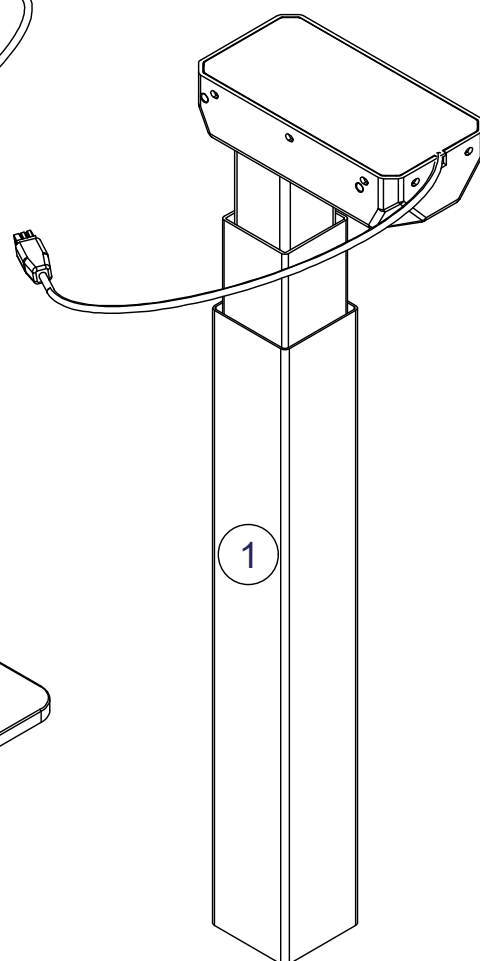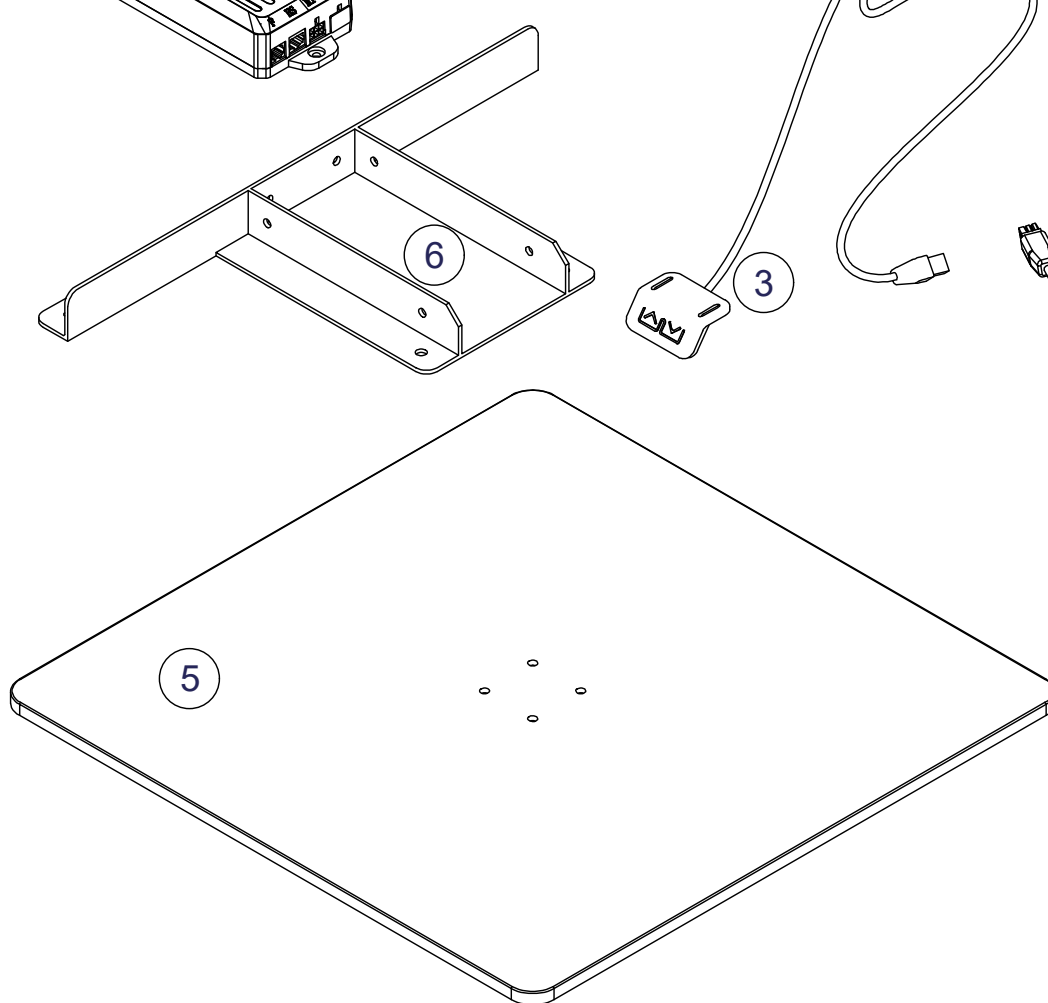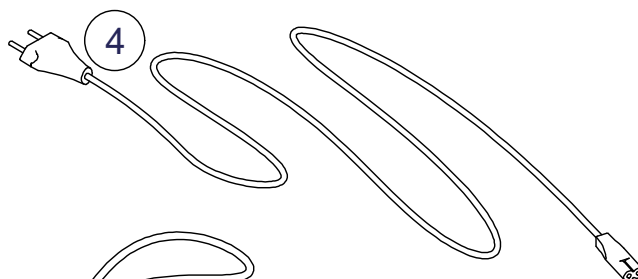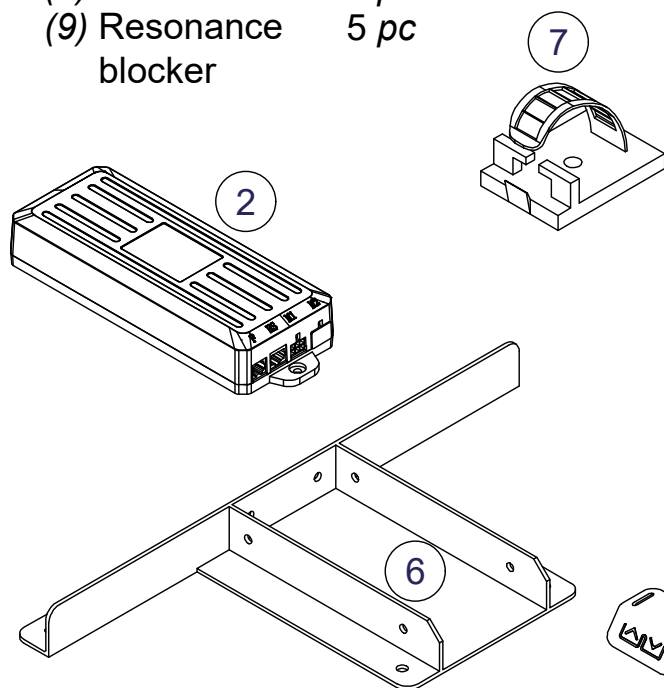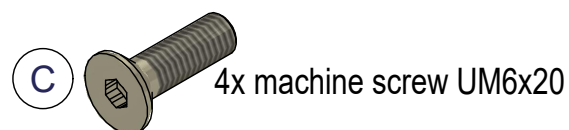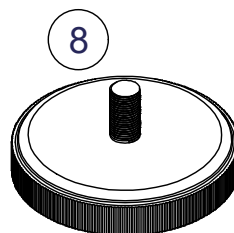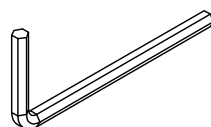

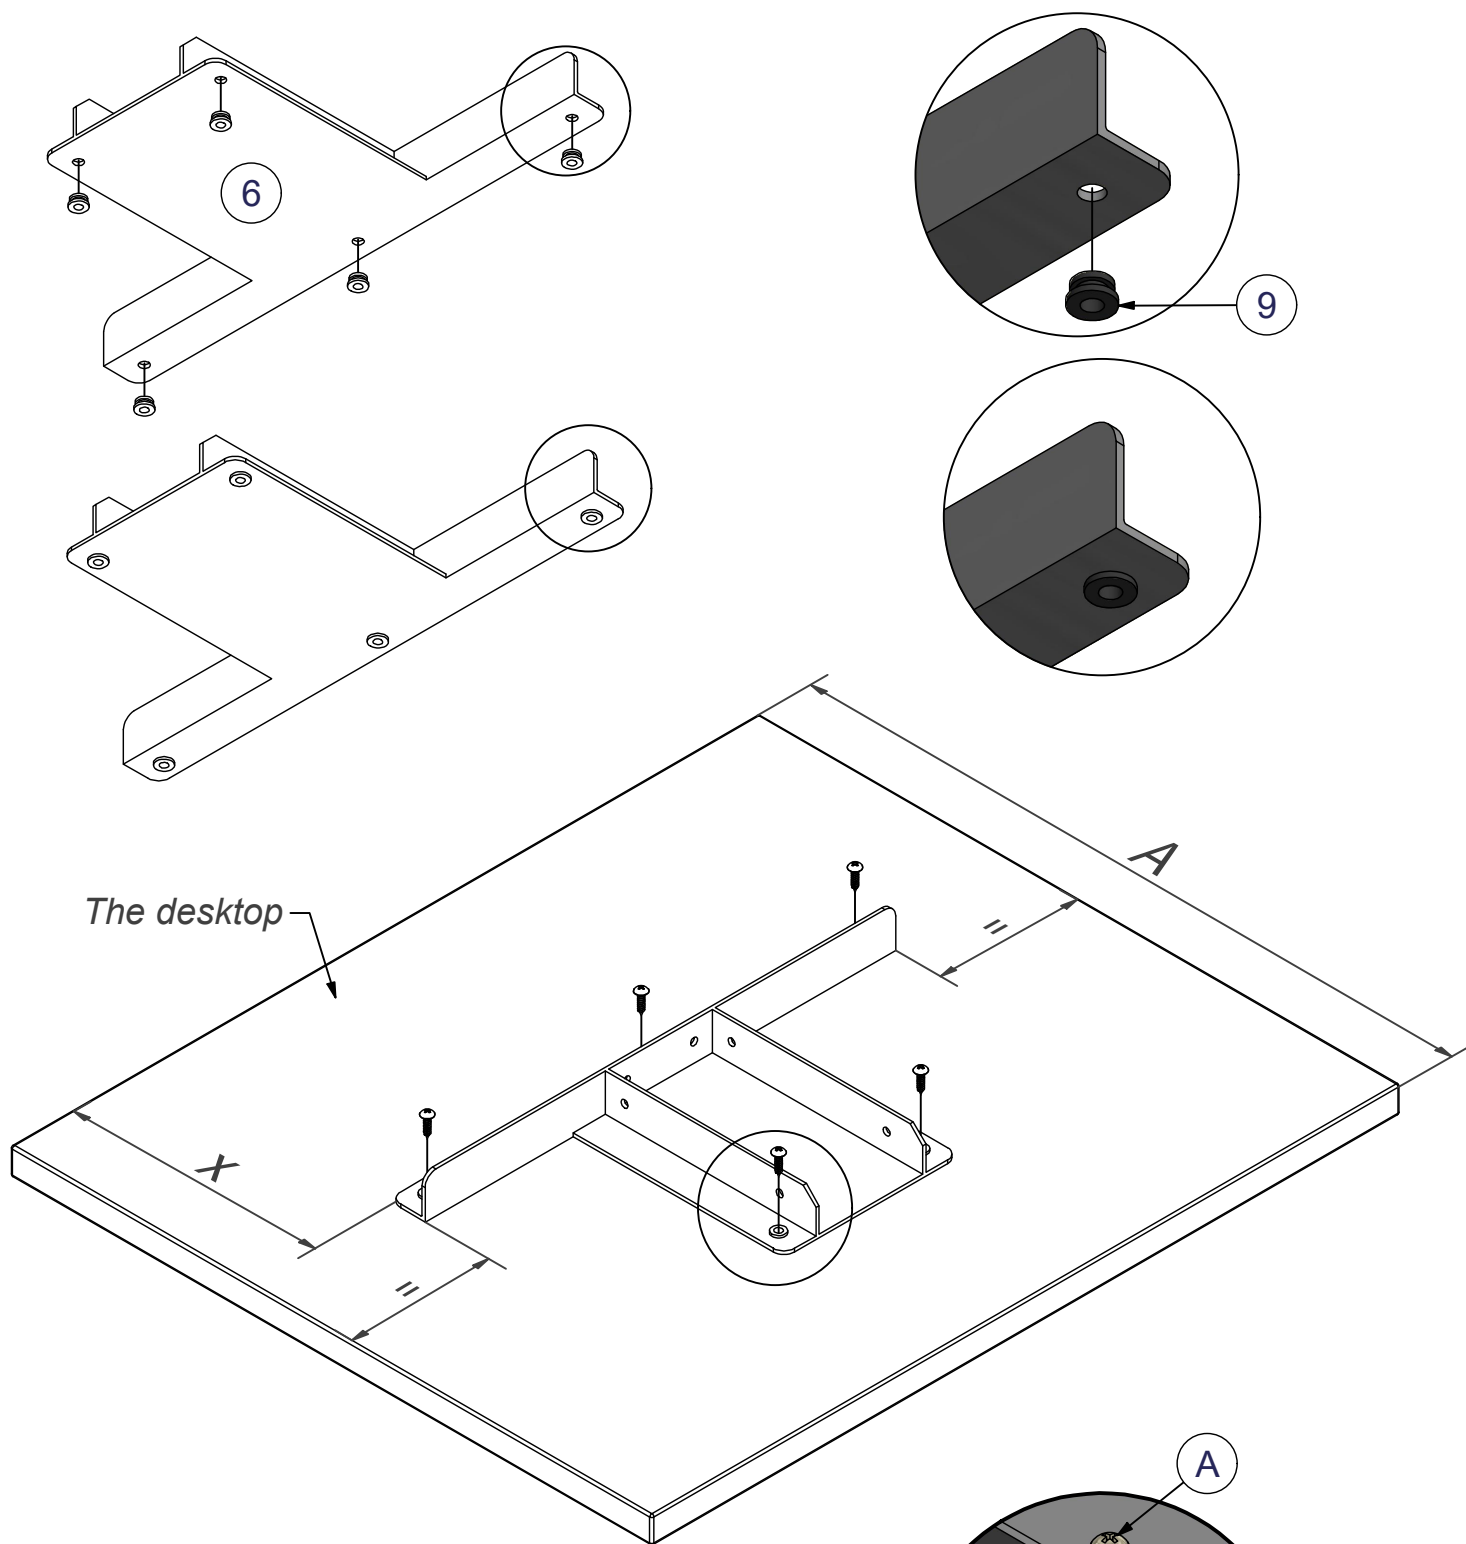


$$x = (A/2) - 75\text{mm}$$





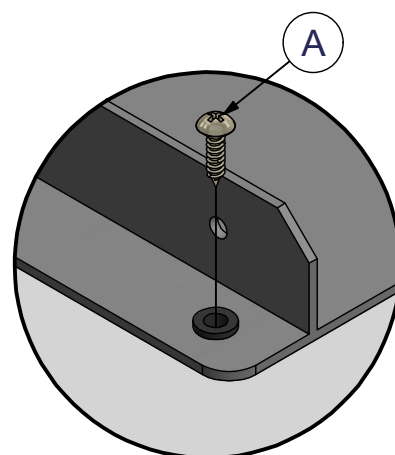


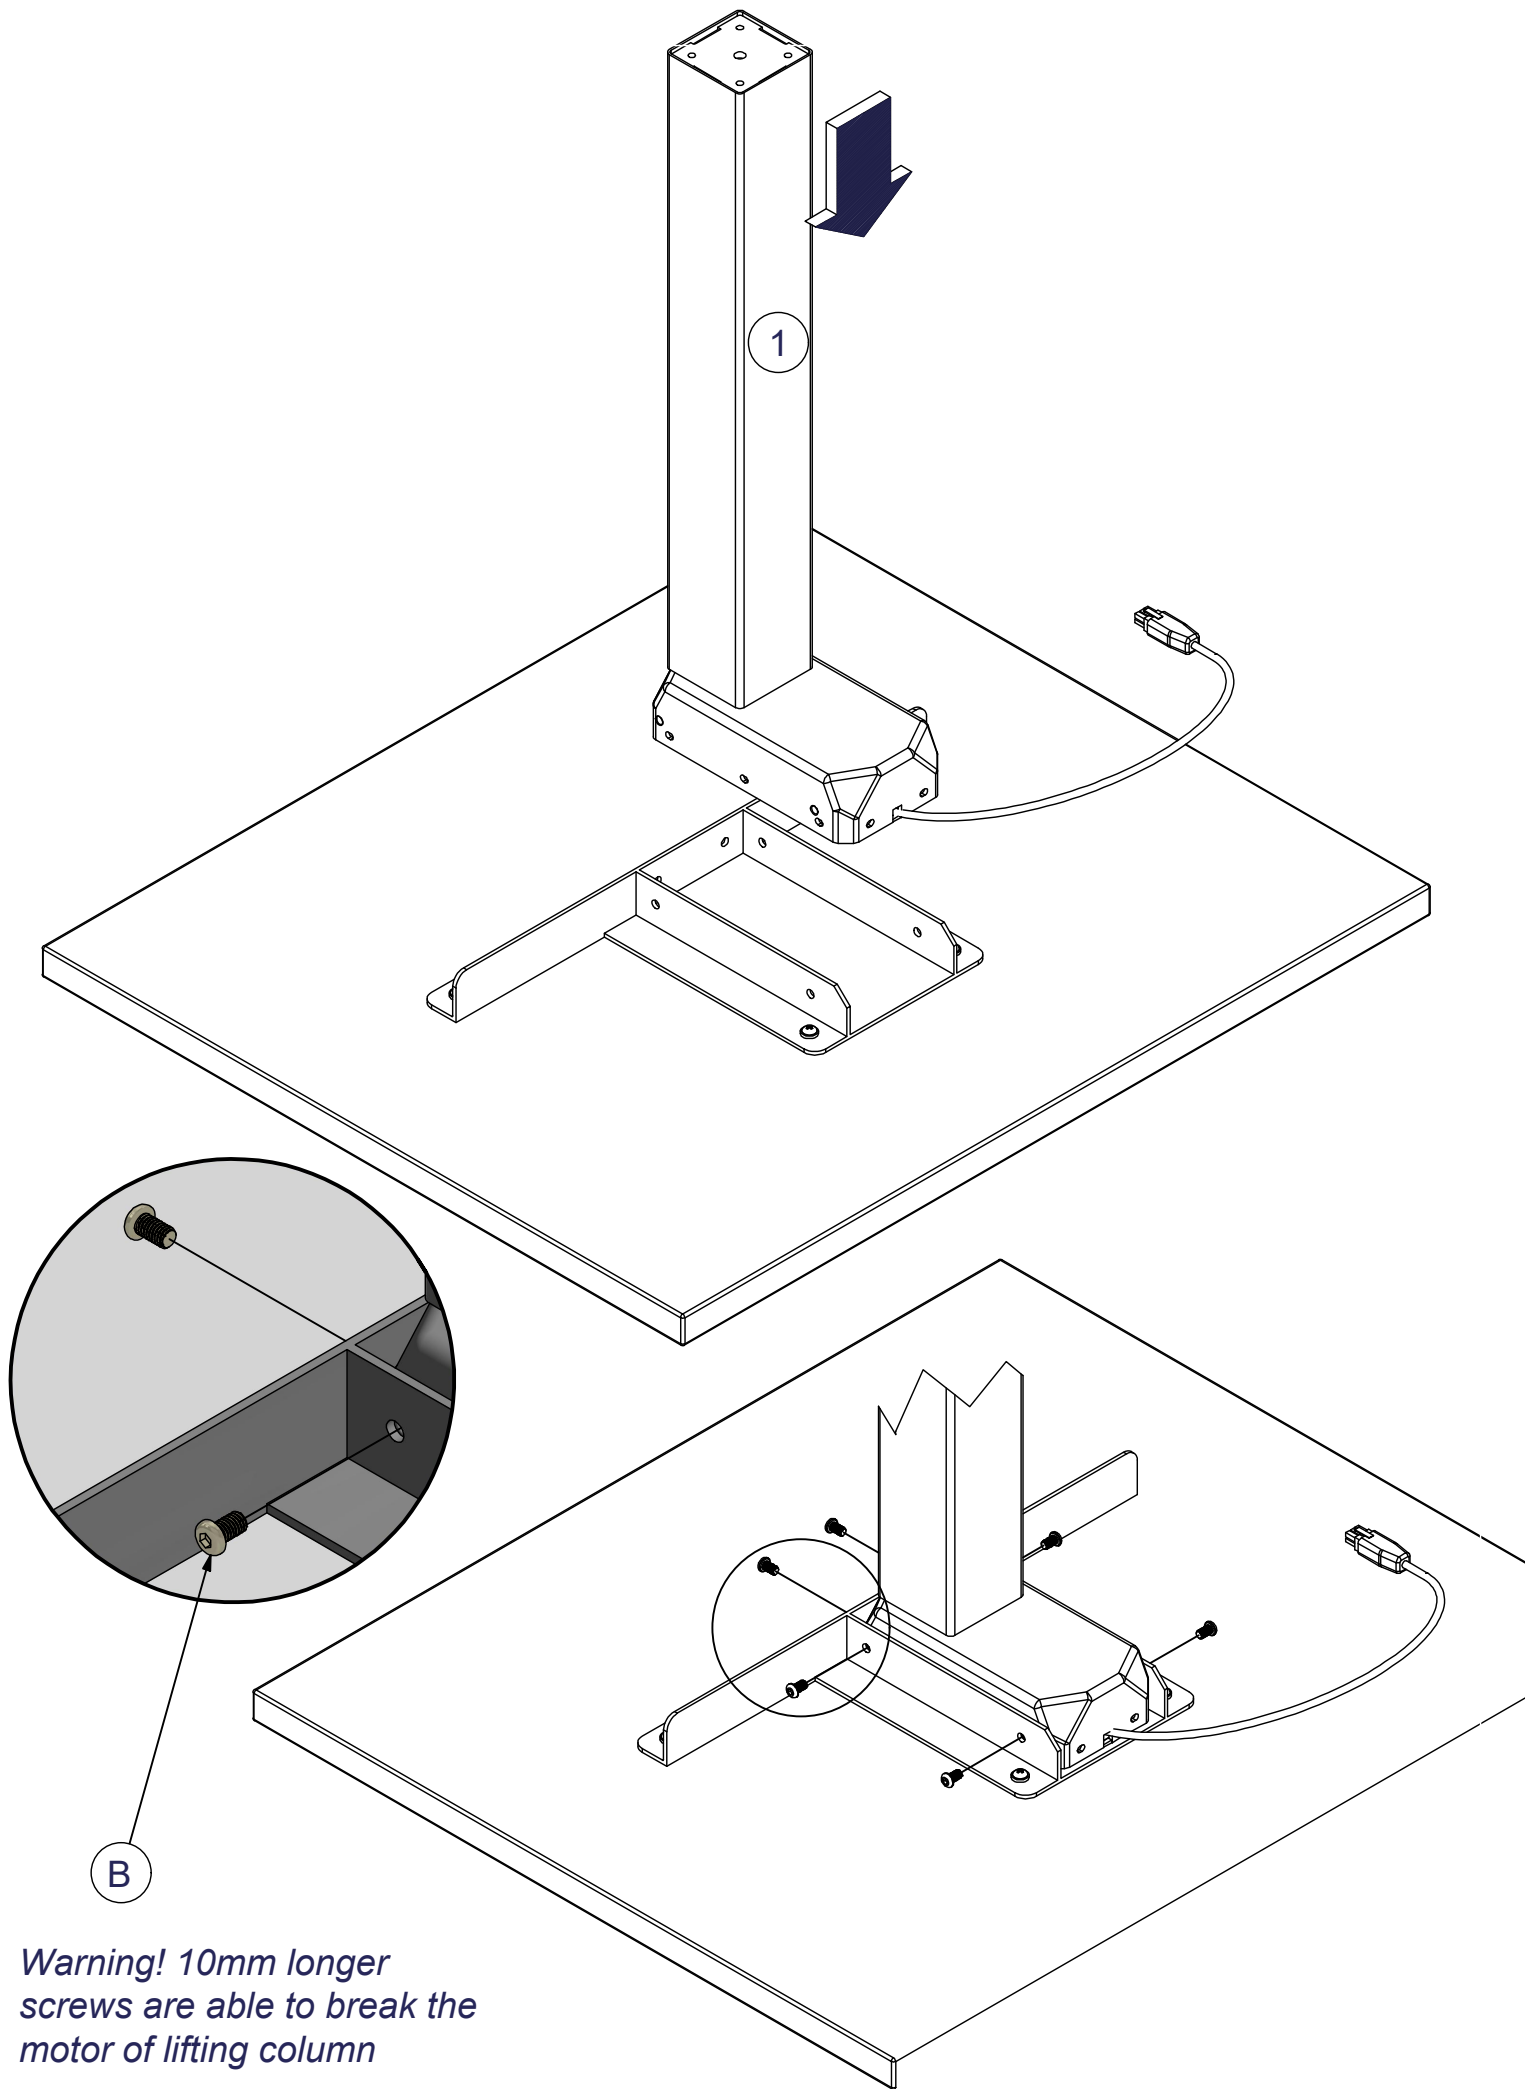


Warning! 10mm longer screws are able to break the motor of lifting column

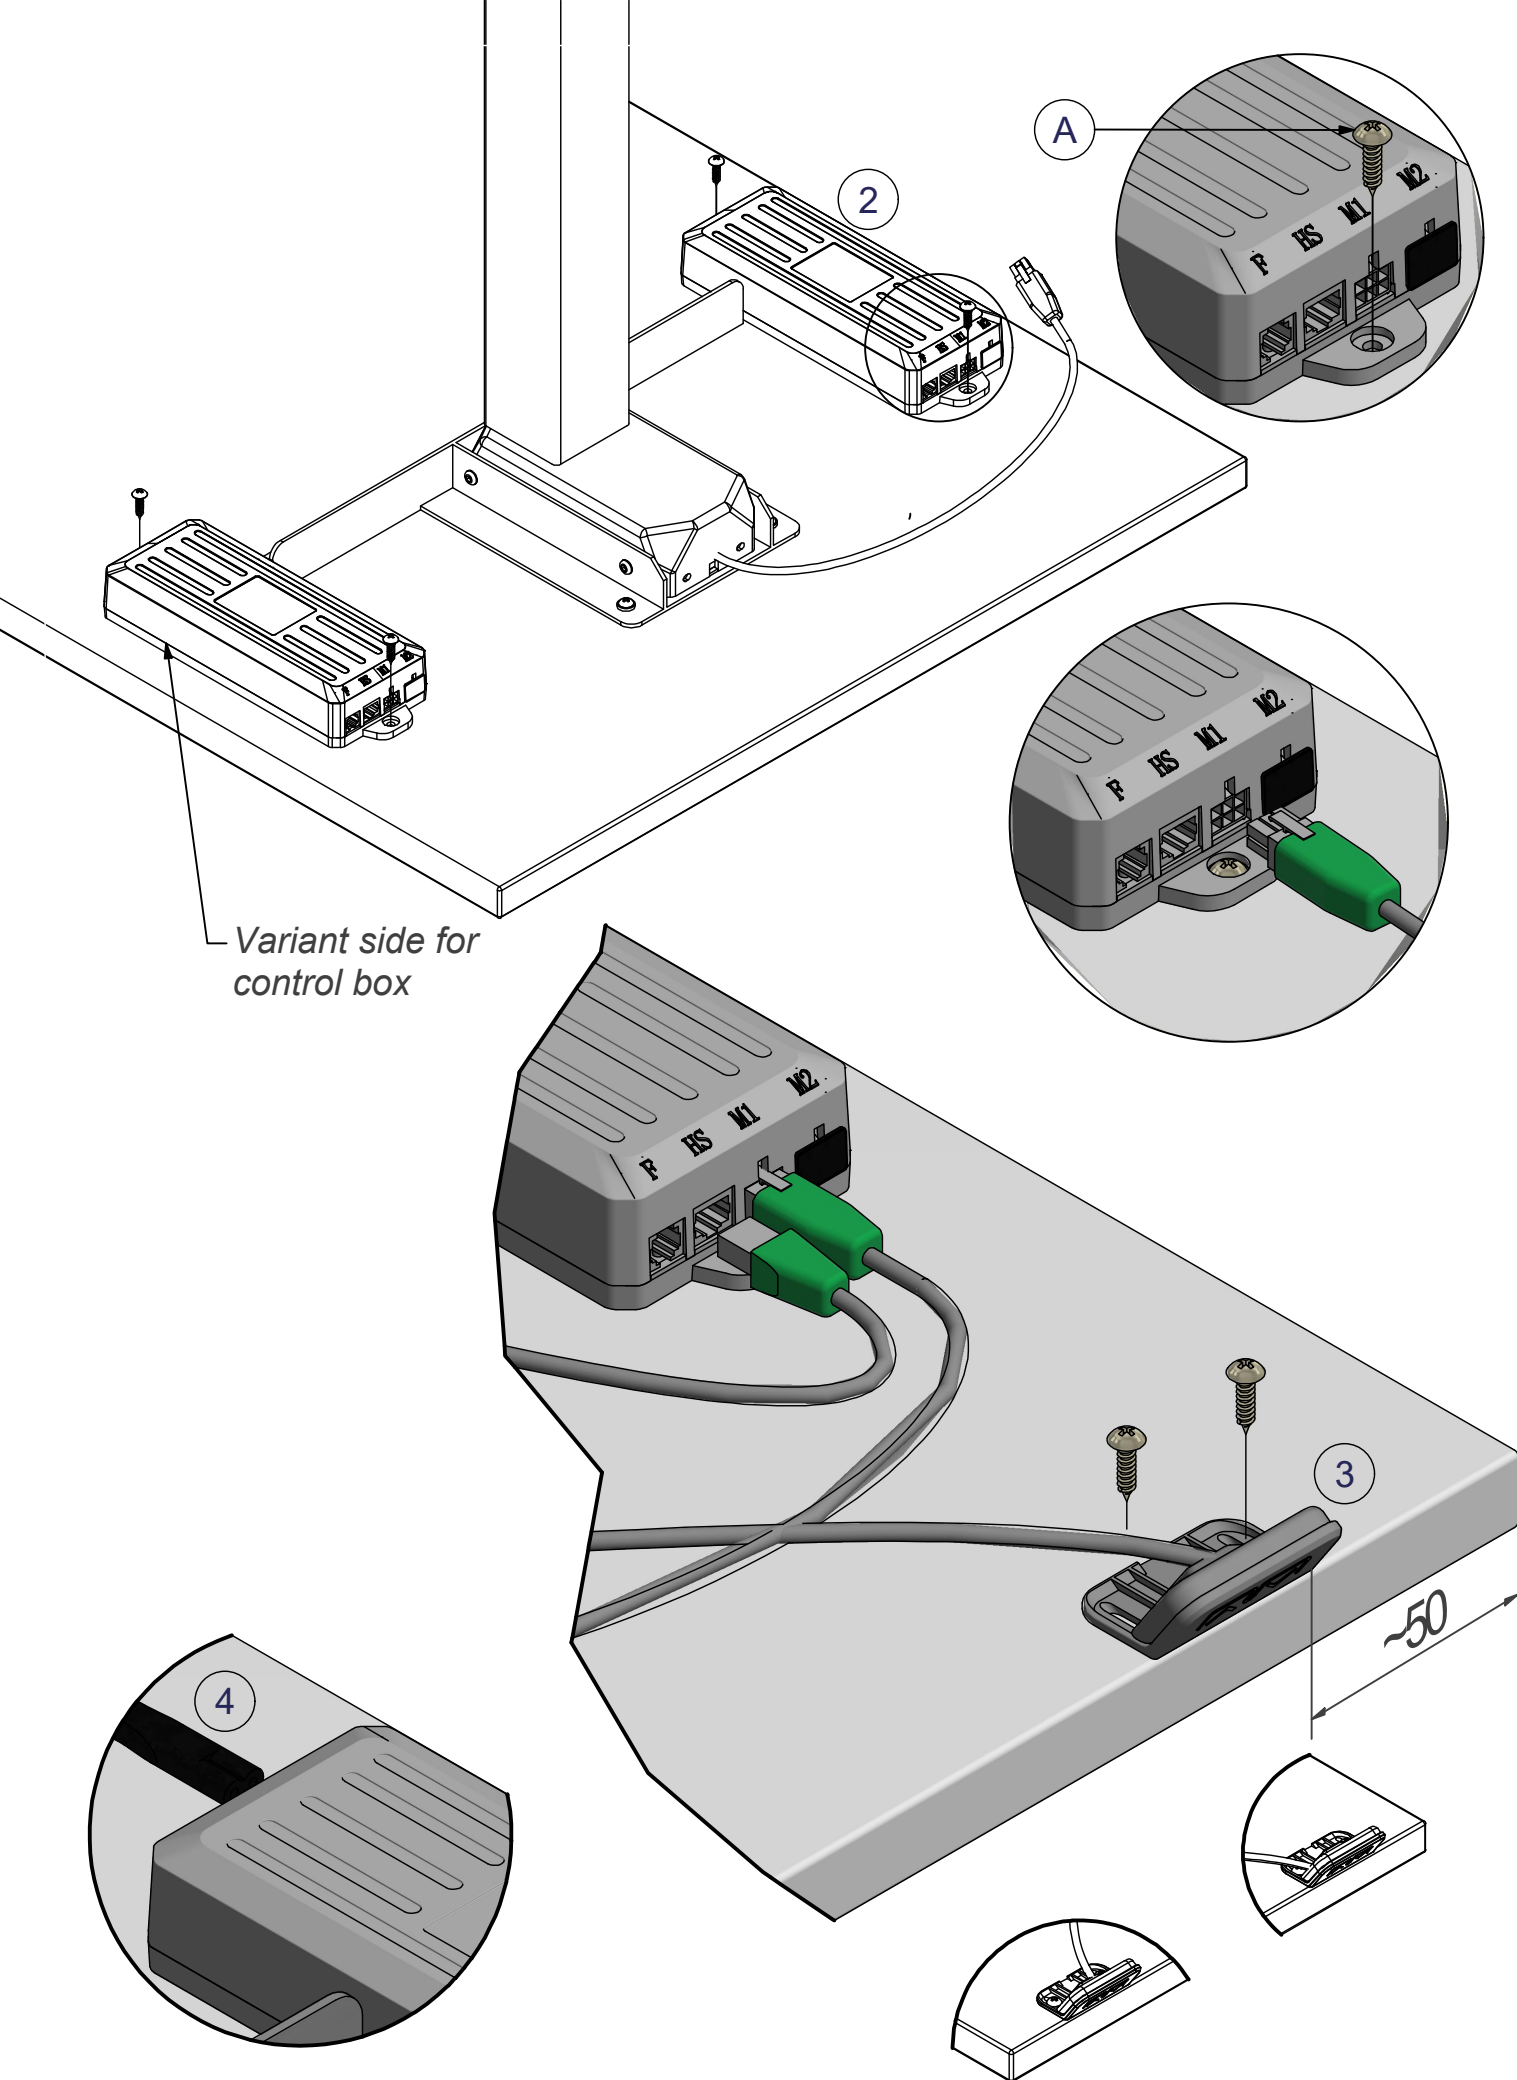

 *Cable clip with
sticker on the side
of the frame*

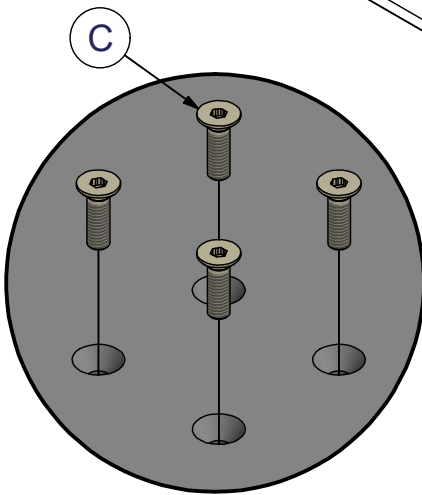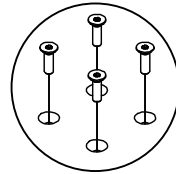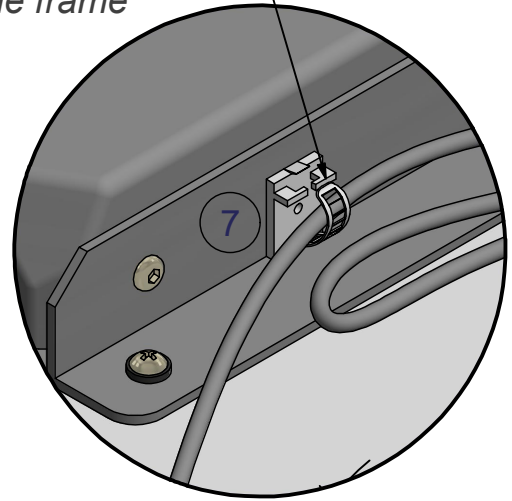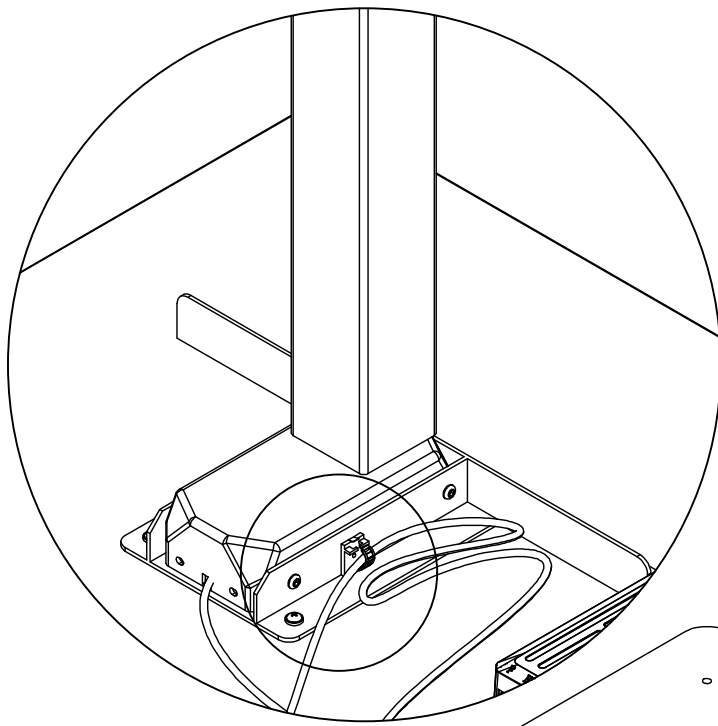

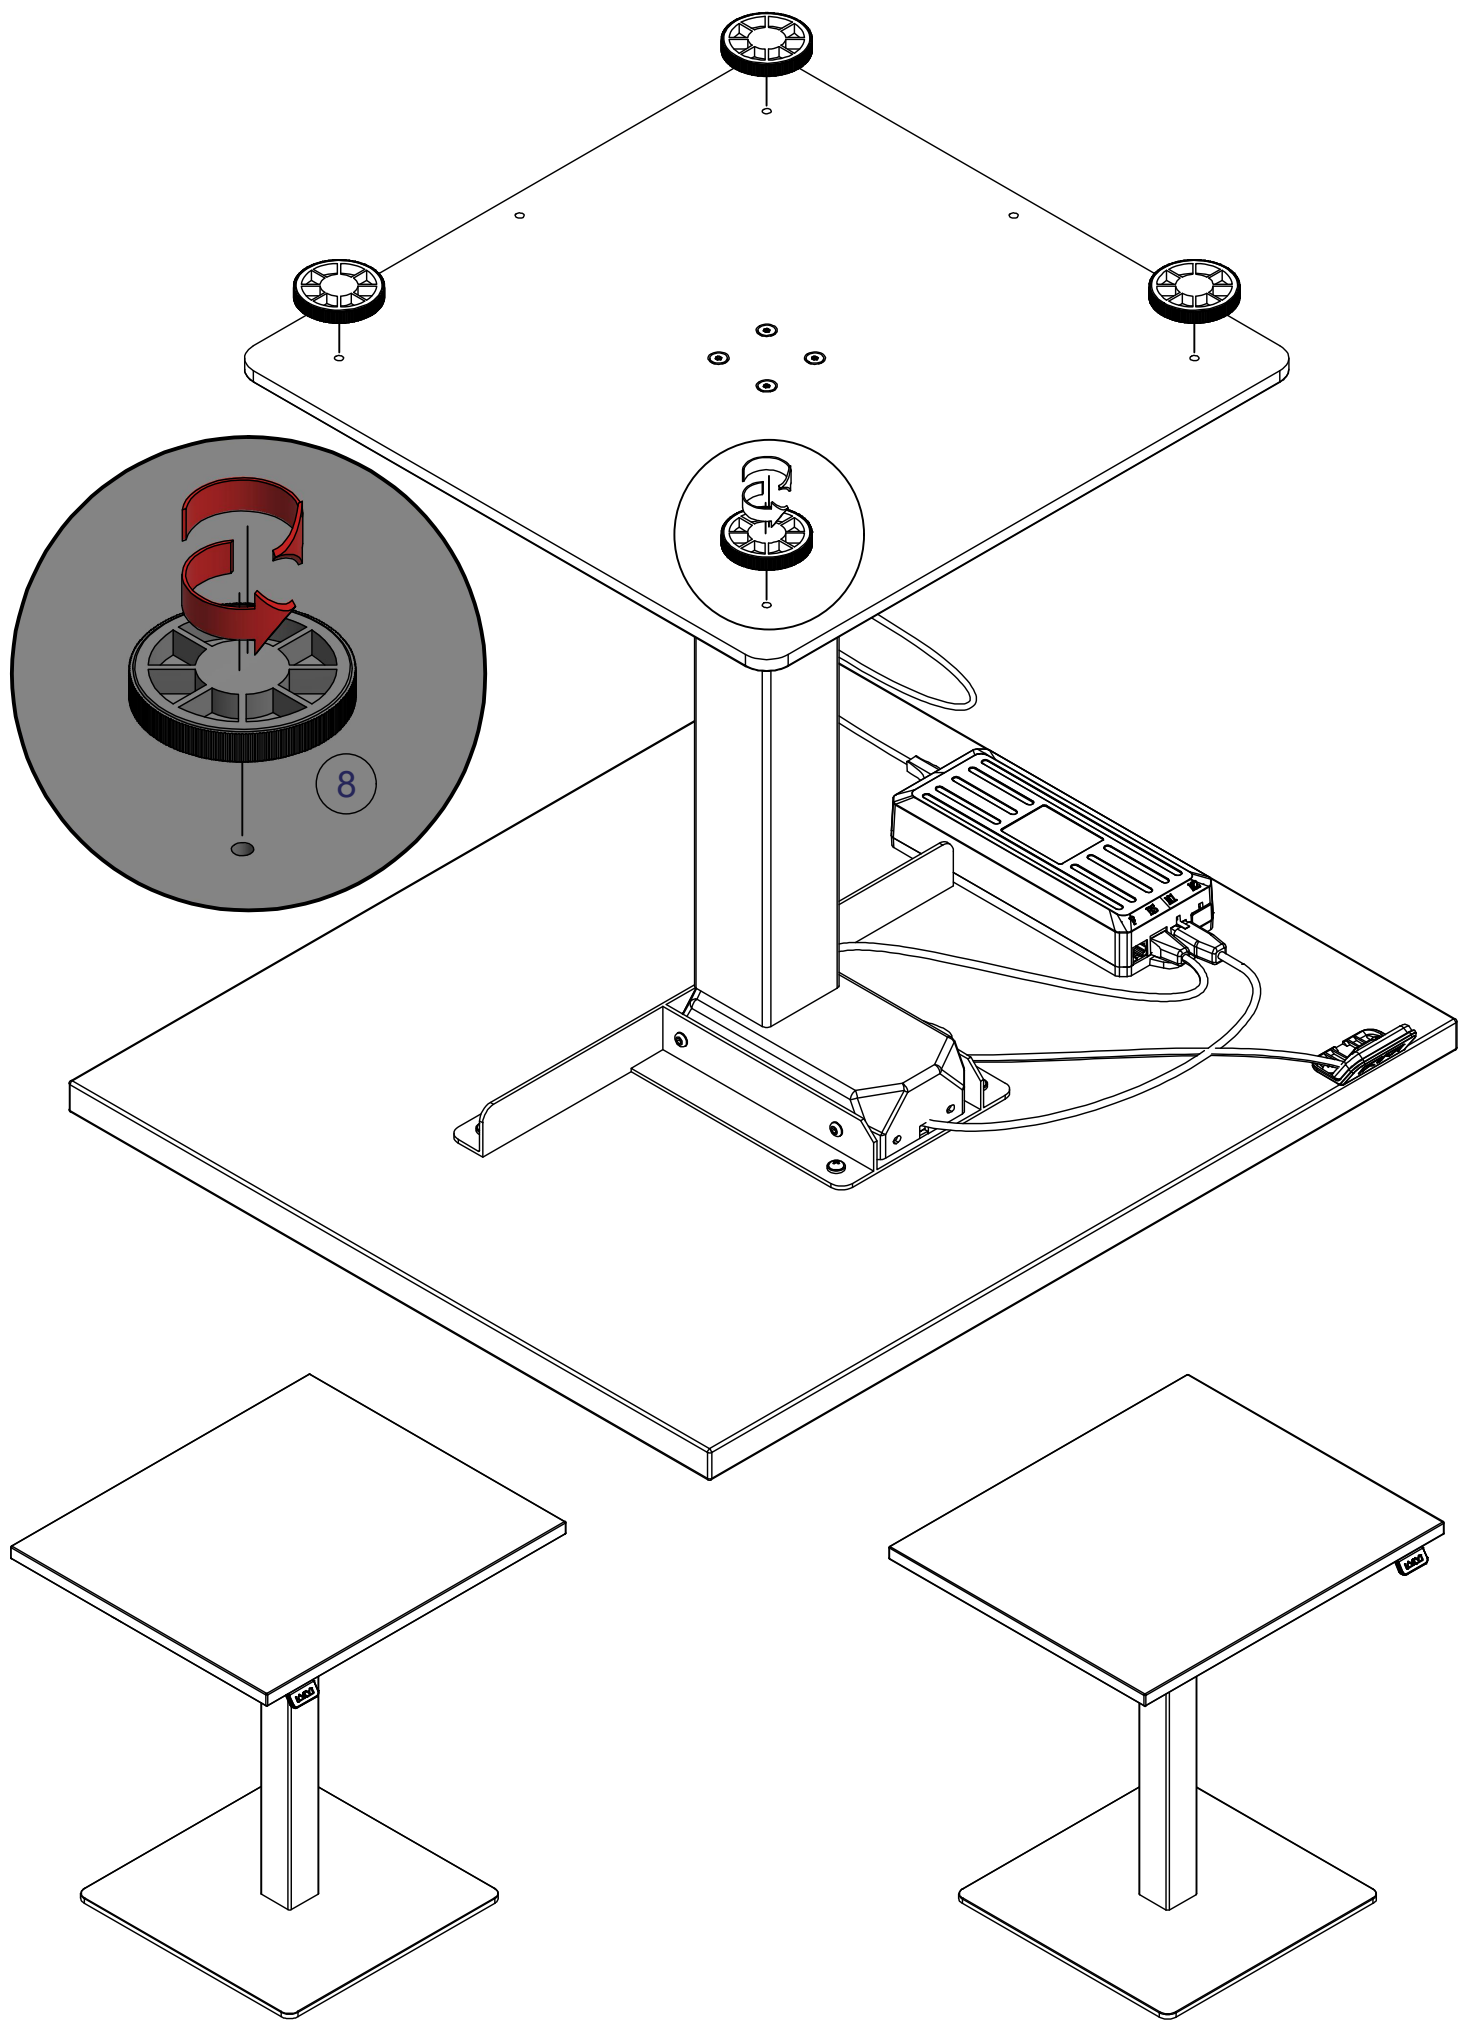

QT Troubleshooting

- Check all connections that are in the bottom and correctly closed.
- The wires are secured under the cover and cannot swing to activate the anti-collision.
- Unplug the power cord and plug it back in.
- If the frame does not move downwards, perform a reset.
- Check that the control unit is attached to the upper frame by the rails so that it does not activate the anti-collision when swinging.
- Resetting the table (you should be patient here). Press the button at the bottom until it starts moving, about 30 sec.).
- Push the down-button as long as table starts to move, and goes to the lowest possible height. This step may need to be repeated several times. Release your finger from the button and press down again, and the table should shake slightly. The table should now be at its lowest height. Now the resetting is completed successfully.